

REMOVER ECO

Detergent to remove thermoplastic and permanent adhesives from printing belt.

Characteristics

Chemical composition:	mixture esters and glycols
Appearance:	clear liquid
Ionic charge:	nonionic
Water solubility:	dispersible
Storage stability:	stable for at least 12 months in the original sealed packaging

Field of application

REMOVER ECO is a specific product for removal thermoplastic and permante adhesives from printing belt.

REMOVER ECO is not toxic, not flammable and is biodegradable

Instructions for use

Is necessary to apply a layer of **REMOVER ECO** on the above the surface of adhesive. To wait the softening and swelling of the adhesive.

When the layer to remove is sufficiently soft, remove it from the printing belt surface. If necessary repete this operation many times.

Wash the carpet with deterget (LAVANTE LPT or KEOPON AL 100) and rinse with water.

Clean very good the adge to any residual of **REMOVER ECO**. Product traces would can be inhibit the adhesion of the new adhesive on the printing belt surface.

Rev.2

Above reported information are just indicative, therefore no responsibility arises on supplier from the use of the product. End users are requested to check validity of said information according to their own, specific use.